



Magic Lamp Instructions.




First unlock the bottom hatch with the blower

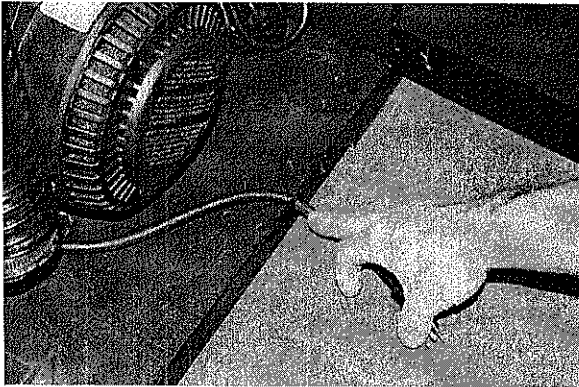


Secure the cable into one of the grooved slots on the bottom of the device to insure the cord isn't pinched or cut.

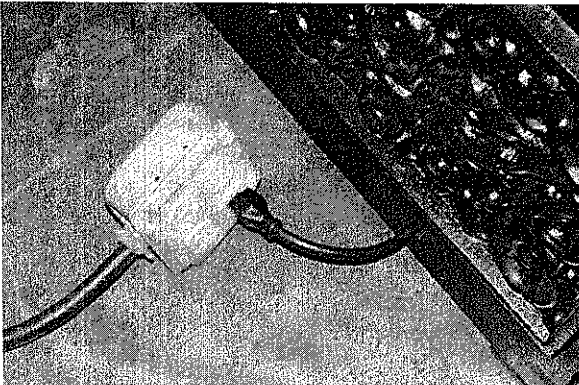


Plug the machine up to a viable power outlet.

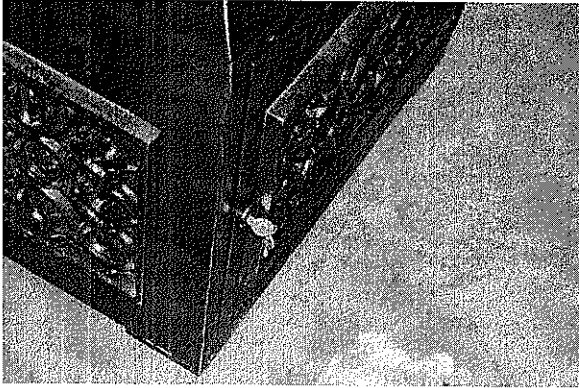


Go to the opposite side of the machine to the fluid container

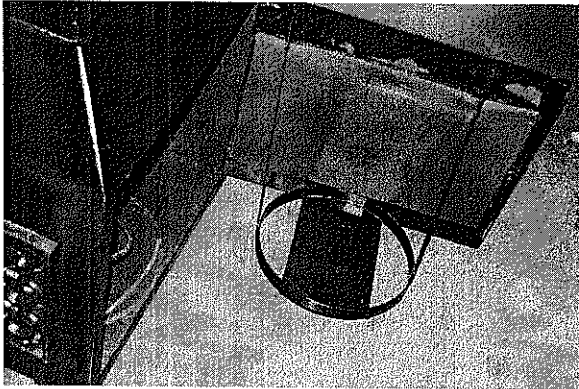

Inside you will see a tray designed to hold either a bucket or a smaller container of snow fluid.

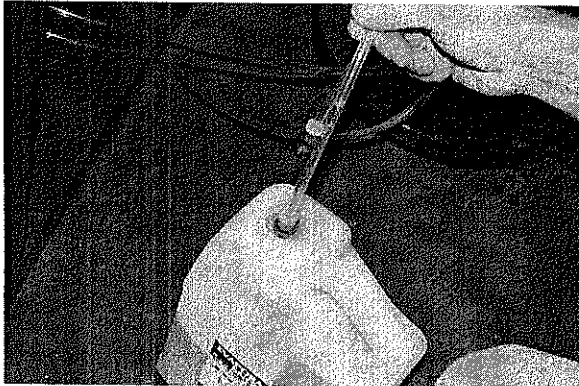


Slip the pump tubes into the container of snow fluid.

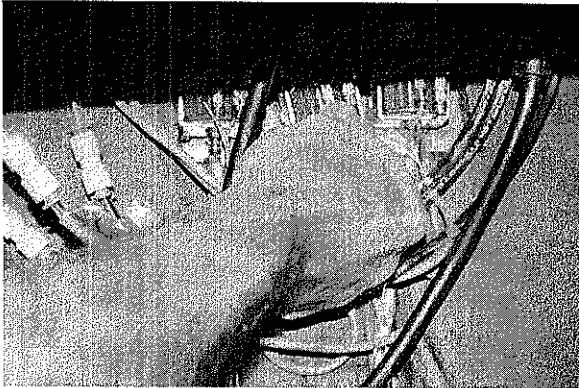


If you are using a bucket, make sure that the bucket doesn't detach one of the connectors inside of the unit. If it does, you may need to tidy up the cables or reconnect them.

Close the bottom door

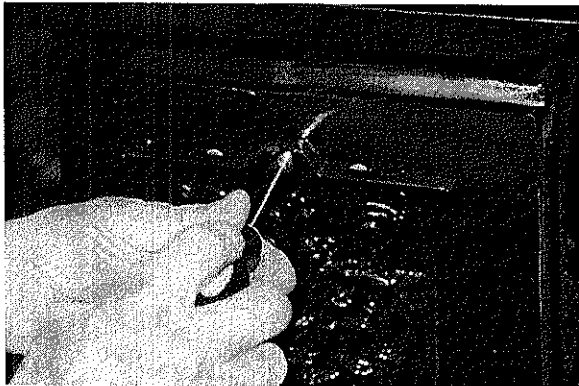


On the same side of the pump there is a control panel underneath a hatch, which you will need to unscrew.


Be sure to hold the panel while you or unscrewing it, or it may fall and damage your toes or possibly shatter.

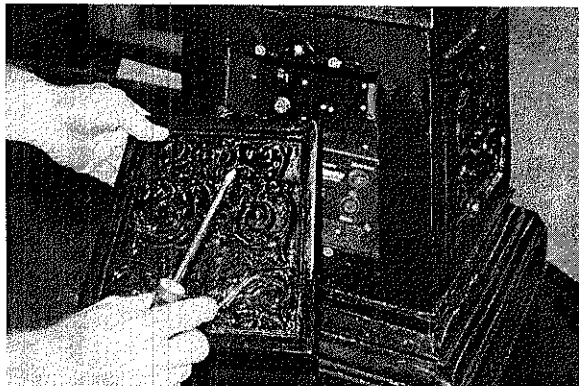

Under the hatch you will find the control panel.

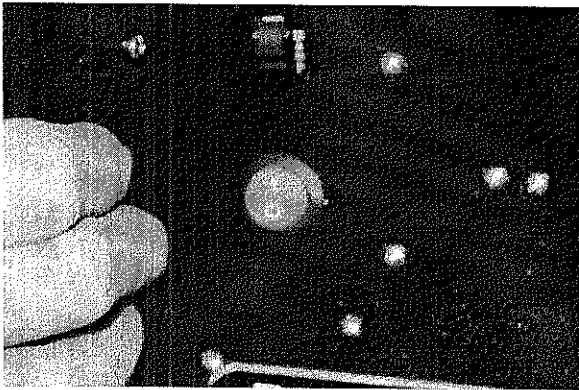

Push the red power button to begin set up.

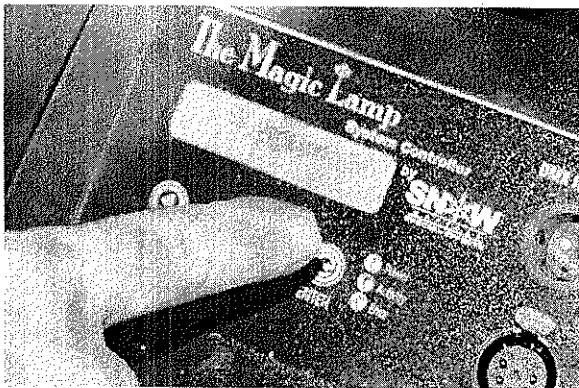

When you start up the machine you will see that the Software version is 1.0.0. If you software version is listed as a different version, it is incorrect. Please call Snowmasters Technical support.



Press enter and you will see an "Auto Cycle" press "Up."



"Up"




Press enter, you will need to prime your pump until your machine has a soft grumbling sound. It will initially sound harsh until the pump is fully primed. You may have to prime 2-4 times in order for the harsh grumble to degrade to a soft grumble.

Do not prime the pump too many times or your machine will leak fluid.




After you are fully primed, push the back button. You will now be on the "Snow Masters screen"

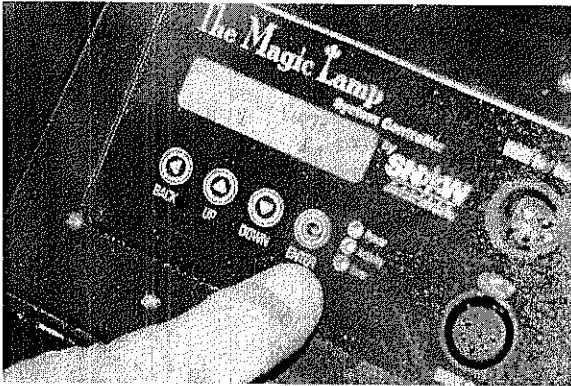

Hit the "Enter" button twice. (If you press it once you will be shown the "Auto Cycle" screen.



Once you are on the "Star/Stop" screen after pressing enter twice from the "Snow Masters" screen. Now press your enter button again, an arrow will now appear next to "Stop"

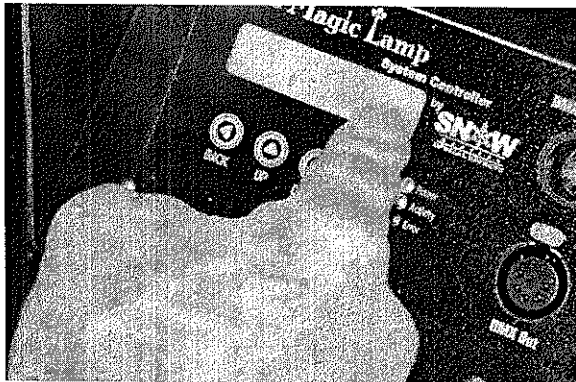


Press the "Up" button so that the arrow is now pointed at "Run" which has replaced the words "Stop," Now press "enter" again and your machine should start to run. It may take up to 5 minutes for snow to be produced.

Other Options/Problems

Blower line coming loose.



In the back side with the blower and electrical line, your pump line may have come loose. If it has come loose your machine will drip water and will not produce snow.

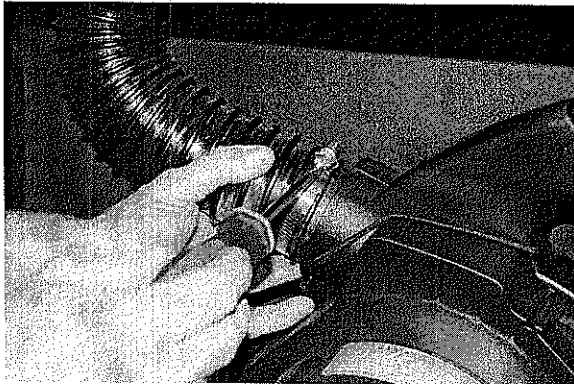

Simply reattach your line with a socket wrench (preferred) or a screw driver.

Other Control Panel Options




The control panel has many other options which can be used, such as using as a remote control, cutting off certain valves, and decreasing or increasing snow size.

If you are on a different screen press the "Back" button until you are on the "Snow Masters" screen.




On the "Start" menu if you press "Up" after the machine is set to "Run" (press back if there is still an arrow on "Run"; in this circumstance your Start/Run" should have two arrows running up and down) you can view the "Flake Size" menu.

On the "Flake Size" menu, you can select 1,2 or 3 as your preferred size and change the output from 0% to 100%. You select these by pressing up and down. (press enter to enter a percentage)

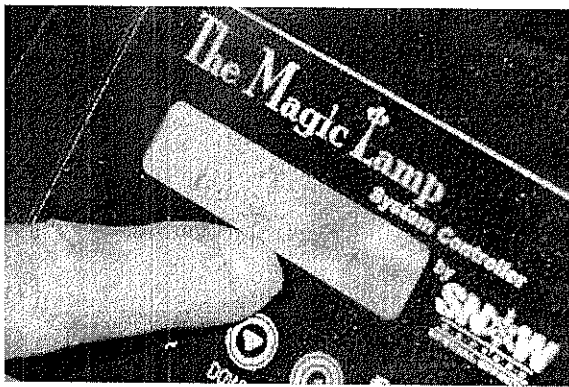

If you are still on the "Flake Size" menu, if you press "Up" again you will come to an "Off Time" screen, make sure your screen is set to 0, otherwise your machine will automatically turn off after x amount of seconds and not restart for 10 minutes (by default.)

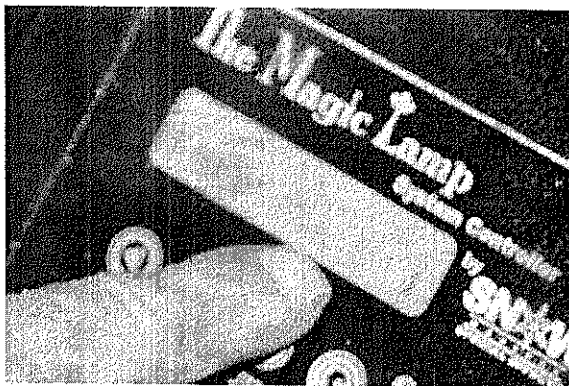

To get the nozzle control, from the Snow Masters (fi you are on another screen press back) screen press the enter button, then press up until you are on "Options." Press "Enter." For all nozzles to be on, make sure it lists 1, 2, & 3. Press "Enter" for the ability to change which nozzles are on, and toggle them by pressing "Up" or "Down." Pressing "Enter" to set them once selected. Once you change the nozzle you **must** turn off the machine to see the changes in effect.



For the remote to work you must have a remote plugged into the DMX port. If you do not have one plugged in the machine will not respond to your settings, but you can still operate within the Control Panel. To set the remote and toggle it, you press enter and toggle "Up" or "Down" to toggle it on and off. If you toggle it "On" and then back "Off" you *may* need to reboot the machine for the machine to go back to normal settings.