



SNOW

M · A · S · T · E · R · S

Event Controller/Timer Manual



www.snowmasters.com

256-229-5551

©2009 SnowMasters



24 Hour Technical Support: 888-391-7669

The functions of the buttons from left to right are as follows:
Menu/Back, Up, Down, Enter




To Set Time and Date:


- 1) Press the **Menu** button to get into the menu.




- 2) Use the **Up** or **Down** button until you see the "Set Time and Date" option, then press the **Enter** button to get into this option.

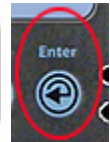

- 3) Use the **Up** and **Down** buttons to adjust selection.

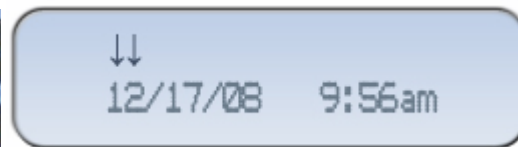


Press the **Enter** button to accept the selection.

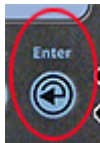


To Set Timer Events:

Up to 14 Timer Events can be scheduled.


- 1) Press the **Menu** button to get into the menu.

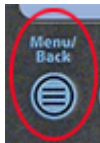


- 2) Press the **Enter** button to get into the "Timer Events" option.

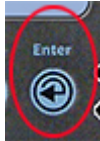



- 3) Use the **Up** or **Down** buttons to select the event number you wish to schedule.

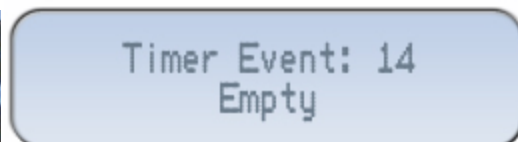



Press Enter to select the event.

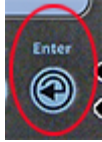

- 4) Use the **Up** and **Down** buttons to adjust the blinking time selection, and **Enter** to accept.

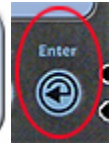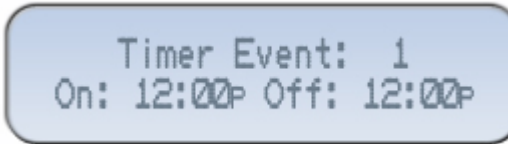

- 5) For the On and Off Days, use the **Up** and **Down** buttons to move the days to On or Off, and **Enter** to accept.

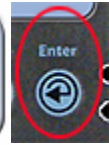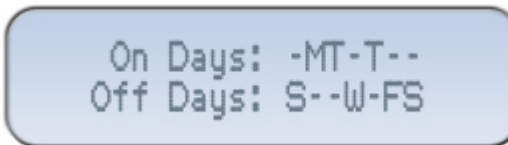


- 6) Press the **Menu** button once to go back to the main screen.





To Delete a Set Timer Event:


- 1) Press the **Menu** button to get into the menu.

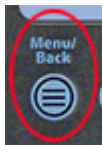


- 2) Press the **Enter** button to get into the "Timer Events" option.

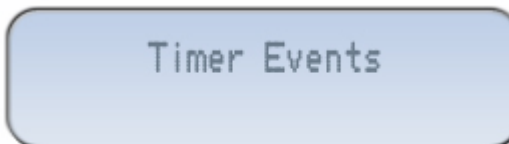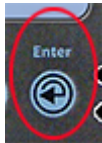

- 3) Use the **Up** or **Down** buttons to select the event number you wish to delete, and then press **Enter** to select the event.

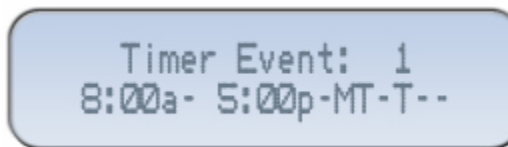

- 4) Use the **Up** or **Down** buttons to scroll to the "Delete" option, and then press **Enter**.

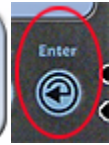

- 5) Press the **Menu** button once to go back to the main screen.




To Set the Cycle Time:


- 1) Press the **Menu** button to get into the menu.





- 2) Use the **Up** or **Down** buttons until you see the "Cycle Time" option, then press **Enter** button to get into this option.

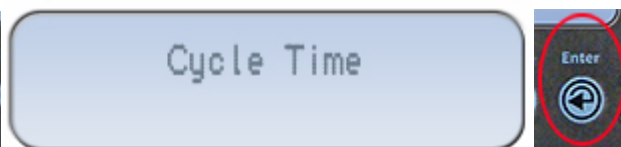

- 3) Press the **Up** or **Down** Button to move arrow to either the On or the Off Time.

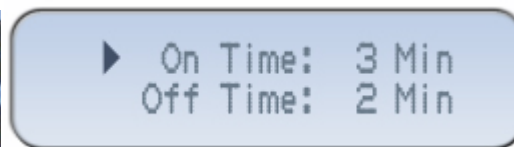

- 4) Press **Enter** to select either the On or Off Time and then press the **Up** or **Down** arrows to adjust the amount of time that the power is on or off. Press **Enter** to accept.

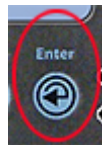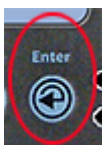


- On times: 1 – 60 minutes.
- Off times: 0 – 60 minutes.

- 5) Press the **Menu** button twice to go back to the main screen.




To Set the Manual Override:


- 1) Press the **Menu** button to get into the menu.

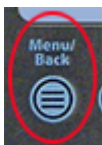

- 2) Use the **Up** or **Down** button until you see the "Manual Override" option, then press the **Enter** button to get into this option.

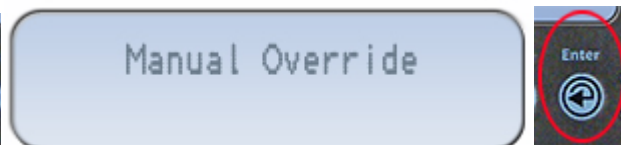

- 3) Use the **Up** or **Down** buttons to adjust the amount of time you wish the Manual Override to go for, then press the **Enter** button to accept.

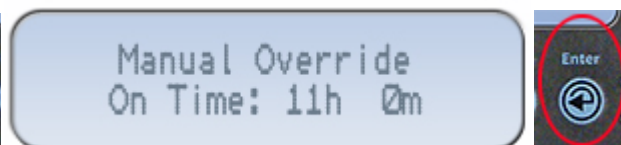

- Times: OFF to 12 hours, in 15 minute increments.