



# How to load the Cryofetti system

Step 1 - Using suitable size backer rod (wadding). Insert backer rod into tube, push backer rod to within 3" to 4" of the back of barrel.

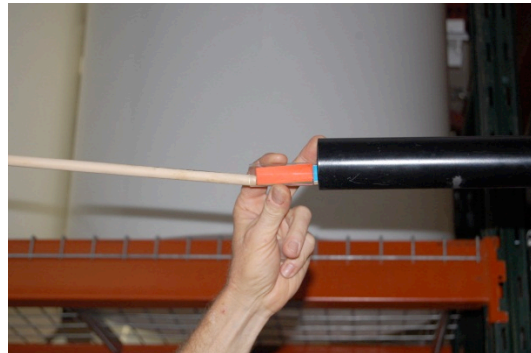

Step 2 - Insert desired confetti or streamers into tube. Push confetti or streamers to the backer rod. ATTENTION: \*\*Multiple loads that fill the barrel work better than single load. \*\*



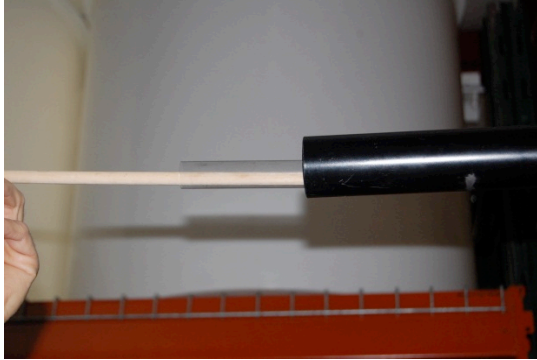

**(If using tubed speed loaders, BE SURE to remove tube before installing pressure cap)**

Step 3 - Place pressure cap on to front of barrel. Wrap pressure cap with 2 complete wraps of paper masking tape. Use no more or no less than 2 complete wraps of masking tape.



Step 4 - Turn on the valve to the CO<sub>2</sub>!

Step 5 - Blast off confetti and enjoy!