



The New Edge in Fragrance Technology

AromaStat 1 HVAC Installation Manual



Eco-Scent is an affiliate of



www.eco-scent.com
256-229-5551

Lifetime Warranty

©2009 SnowMasters


Follow these instructions to install the Eco-Scent AromaStat 1 Fragrance Delivery System into your HVAC system.

- 1 Find an accessible location on or near your HVAC system's ductwork to mount both the AromaStat 1 unit and the hose that will go into your ductwork.

Make sure of the following:

- The hose will reach from the unit to where you will attach the hose to the ductwork without stressing it (within about 4 feet/1.2m).
- Once the unit is mounted, that you will be able to easily operate the control panel and also insert scent cartridges.


- 2 Using the included right angle attachment, outline in pencil on the ductwork the location for the attachment, so you will know where to cut the hole for the flexible hose to be attached. *(Note: To trace the circular outline, you will turn the attachment in the direction shown here - which is opposite from the way it will actually be inserted. See Step 4.)*

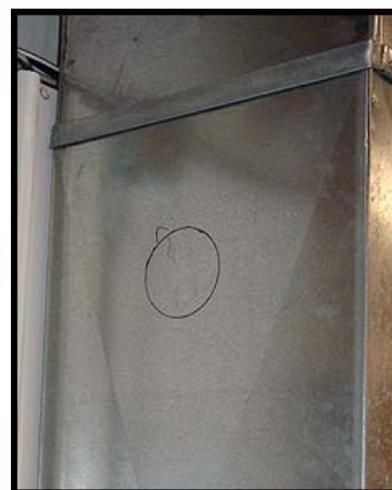

- 3 Use a jigsaw to cut the hole in the ductwork.

- 4** Insert the right angle attachment into the hole to make sure it will fit properly. Note that the right angle actually goes *inside* the ductwork.

You will be inserting the attachment so it is pointing in the direction of the air flow.

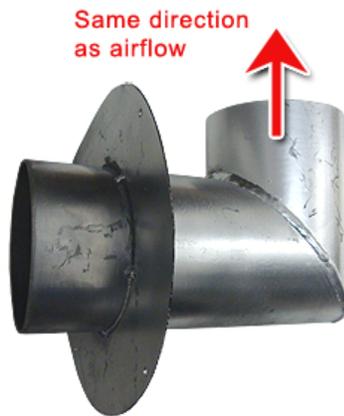

- 5** Apply silicone to the lip of the right angle attachment, and reinsert into the ductwork, again making sure it is pointing in the airflow direction.

- 6** Secure by screwing in with 4 screws.






7 Now, you will need to mount the AromaStat 1 unit. On the unit, measure the distance between the holes for the mounting screws (approximately 9in/23cm). Mark those measurements on the ductwork or wall where you will be mounting the unit. With a drill, screw in 2 screws until they are about 1/8in/0.3cm from the ductwork/wall.

8 Hang the unit on the screws.



9 Using the provided clamps, attach one end of the hose to the hose attachment and the other to the AromaStat 1 unit. Secure the clamps by tightening.

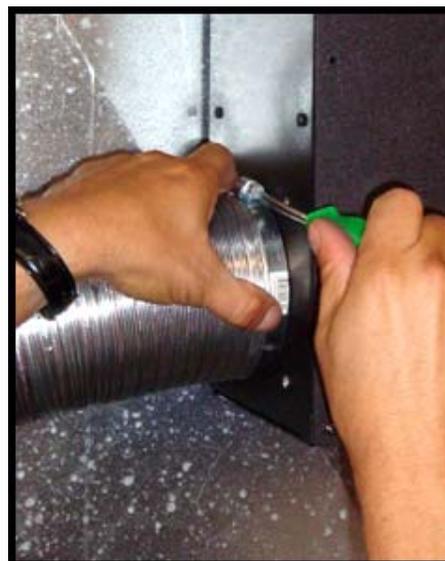

The installation is complete. Insert a scent cartridge, plug in the power cord, and choose the desired settings on the control panel.

24 Hour Technical Support: 888-391-7669